

SPEARGUNS



EN	IT	FR	ES	DE	PT	ZH
TH	JA	ID	HI	RU	AR	TR
EL	PL	HU	KO	CS	SV	RO
NL	NO	FI	DA	SL	HR	SK
BG	ET	LV	LT	UK		

INDEX

EN	USER MANUAL	CS	NÁVOD K POUŽITÍ
IT	MANUALE D'USO	DA	BRUGERMANUAL
FR	MANUEL DE L'UTILISATEUR	FI	KÄYTTÖOHJE
ES	MANUAL DE USUARIO	HR	UPUTE ZA UPORABU
DE	BEDIENUNGSANLEITUNG	HU	HASZNÁLATI ÚTMUTATÓ
PT	BEDIENUNGSANLEITUNG	NL	GEBRUIKERSHANDLEIDING
ZH	用戶手冊	NO	BRUKERVEILEDNING
TH	คู่มือการใช้	PL	INSTRUKCJA OBSŁUGI
JA	ユーザーマニュアル	RO	MANUAL DE UTILIZARE
ID	PANDUAN PENGGUNA	SK	KULLANICI KILAVUZU
HI	उपयोगकर्ता पुस्तिका	SV	ANVÄNDARMANUAL
RU	Руководство пользователя	EL	ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ
AR	دليل المستخدم	KO	사용 설명서
TR	KULLANICI KILAVUZU	BG	РЪКОВОДСТВО ЗА ПОЛЗВАНЕ
UK	ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ	SL	UPORABNIŠKI PRIROČNIK
ET	KASUTAJAKÄSITLUSJUHEND		
LV	LIETOŠANAS ROKASGRĀMATA		
LT	NAUDOJIMO VADOVAS		

CAN'T FIND YOUR LANGUAGE?

See the manual in the **MANUALS & SOFTWARE** section
at www.cressi.com or scan the QR-code

EN	IT	FR	ES	DE	PT	ZH
TH	JA	ID	HI	RU	AR	TR
EL	PL	HU	KO	CS	SV	RO
NL	NO	FI	DA	SL	HR	SK
BG	ET	LV	LT	UK		



Official Website
www.cressi.com

Follow us on:

Facebook
Instagram
Youtube
X
TikTok

info@cressi.com

#SHARE YOUR
EXPERIENCE

FIG. 1 A

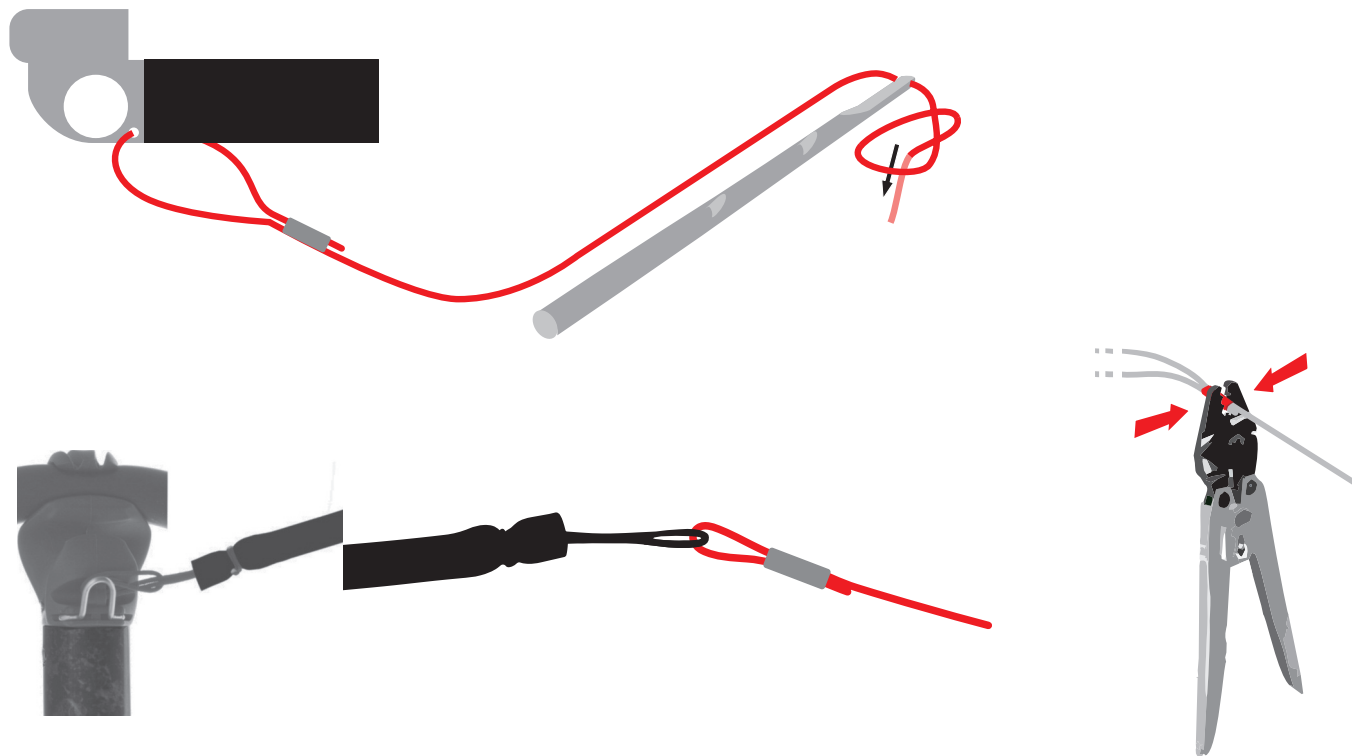


FIG. 1 B

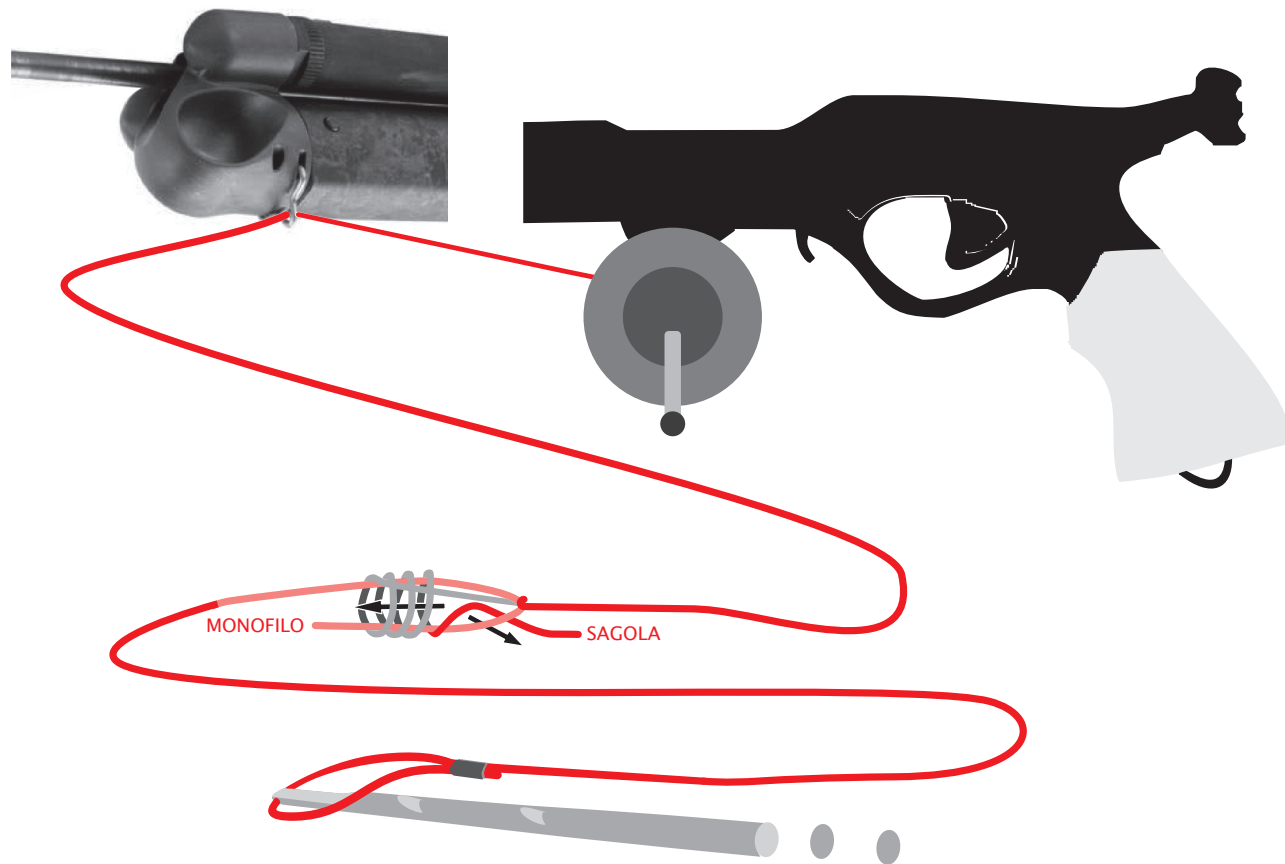


FIG. 2




CHEROKEE / CHEROKEE FAST /
CHEROKEE EXO / CHEROKEE POWER



APACHE



COMANCHE RAIL /
MOICANO

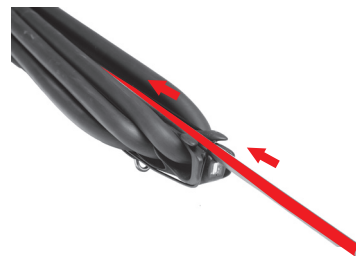

VICTORY

FIG. 3



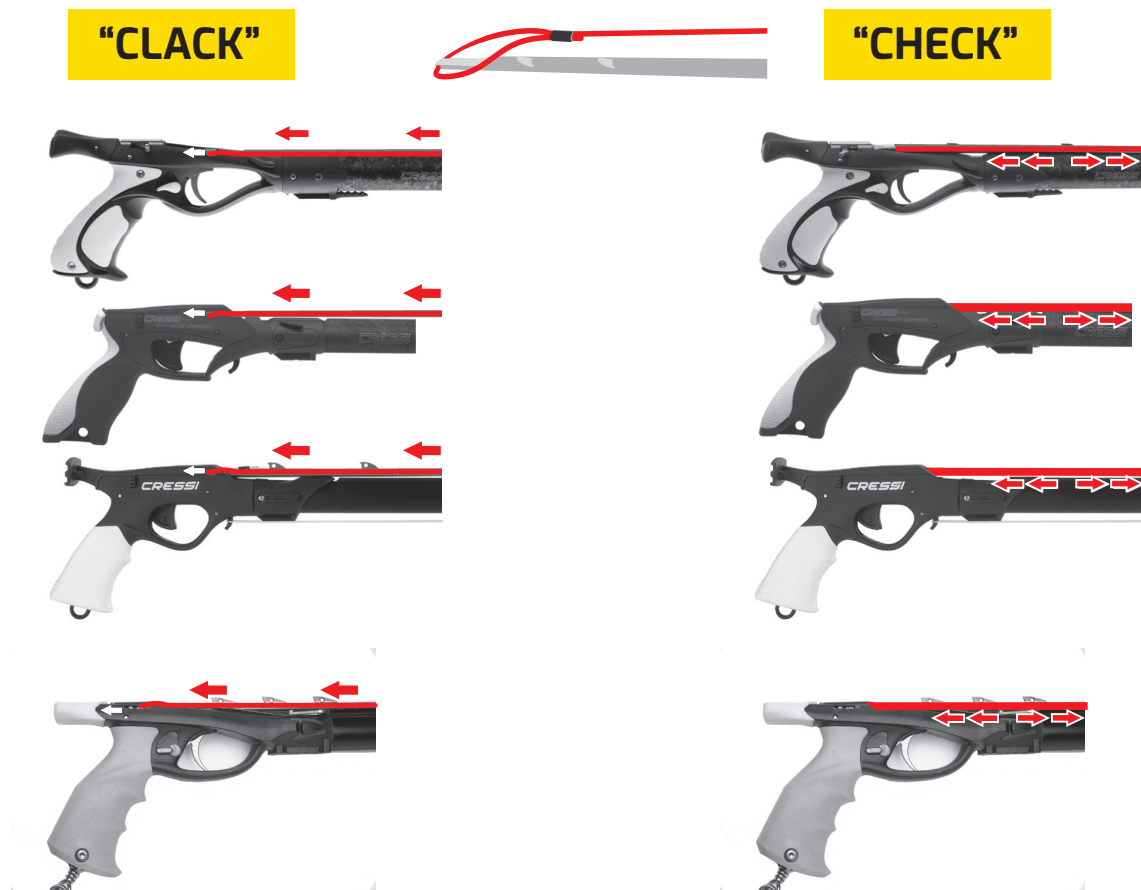


FIG. 4 A

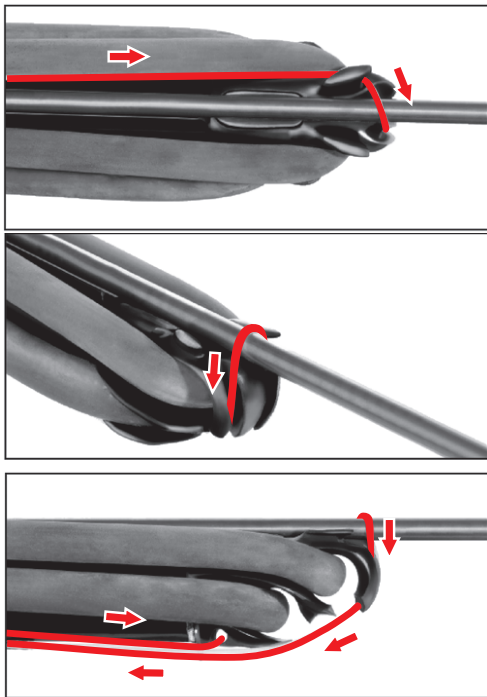

CHEROKEE / CHEROKEE FAST /
CHEROKEE EXO / CHEROKEE POWER

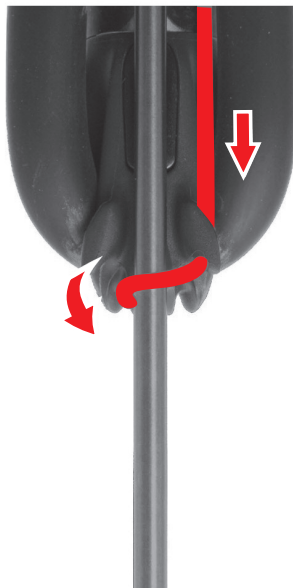

CHEROKEE / CHEROKEE FAST /
CHEROKEE EXO / CHEROKEE POWER



VICTORY

FIG. 4 B


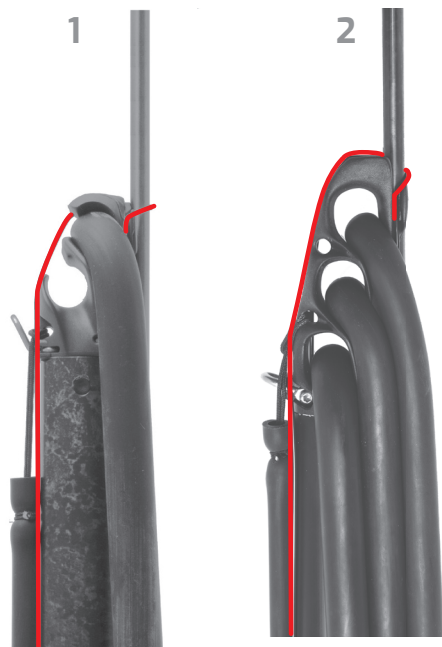


FIG. 4 C



COMANCHE RAIL/ SIOX

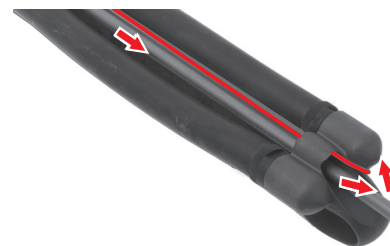

APACHE

FIG. 5



**CHEROKEE / CHEROKEE FAST /
CHEROKEE EXO / CHEROKEE POWER**



APACHE / YUMA FAST



COMANCHE / COMANCHE RAIL / SIOUX



VICTORY

FIG. 6



CHEROKEE / CHEROKEE FAST /
CHEROKEE EXO / CHEROKEE POWER



APACHE / YUMA FAST




COMANCHE / COMANCHE RAIL / SIOUX

LOCK




VICTORY

FIG. 7 A

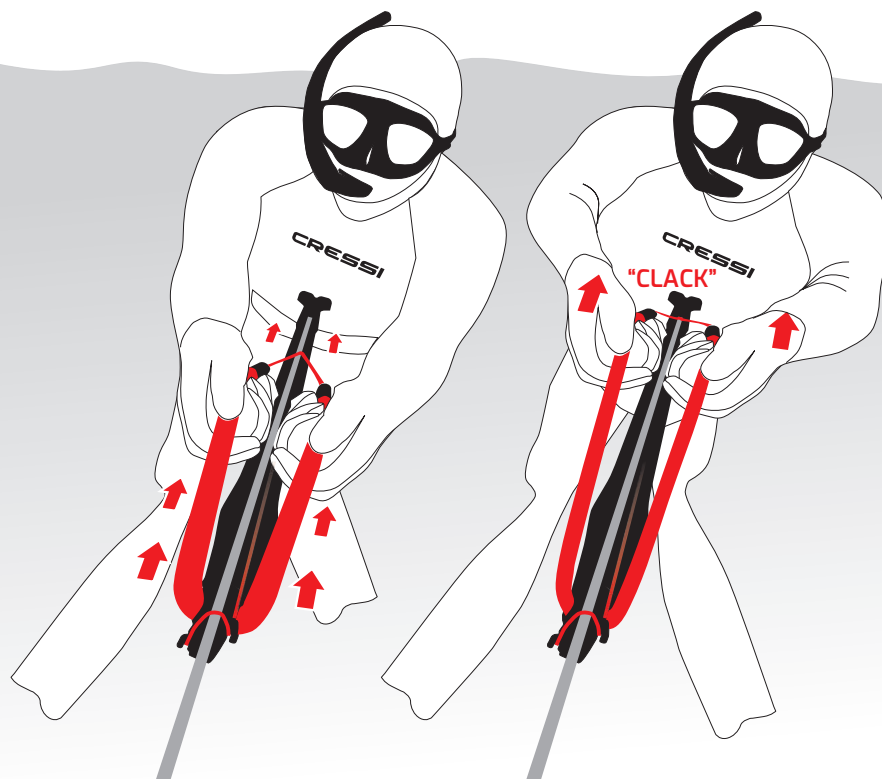

CRESSI

FIG. 7 B

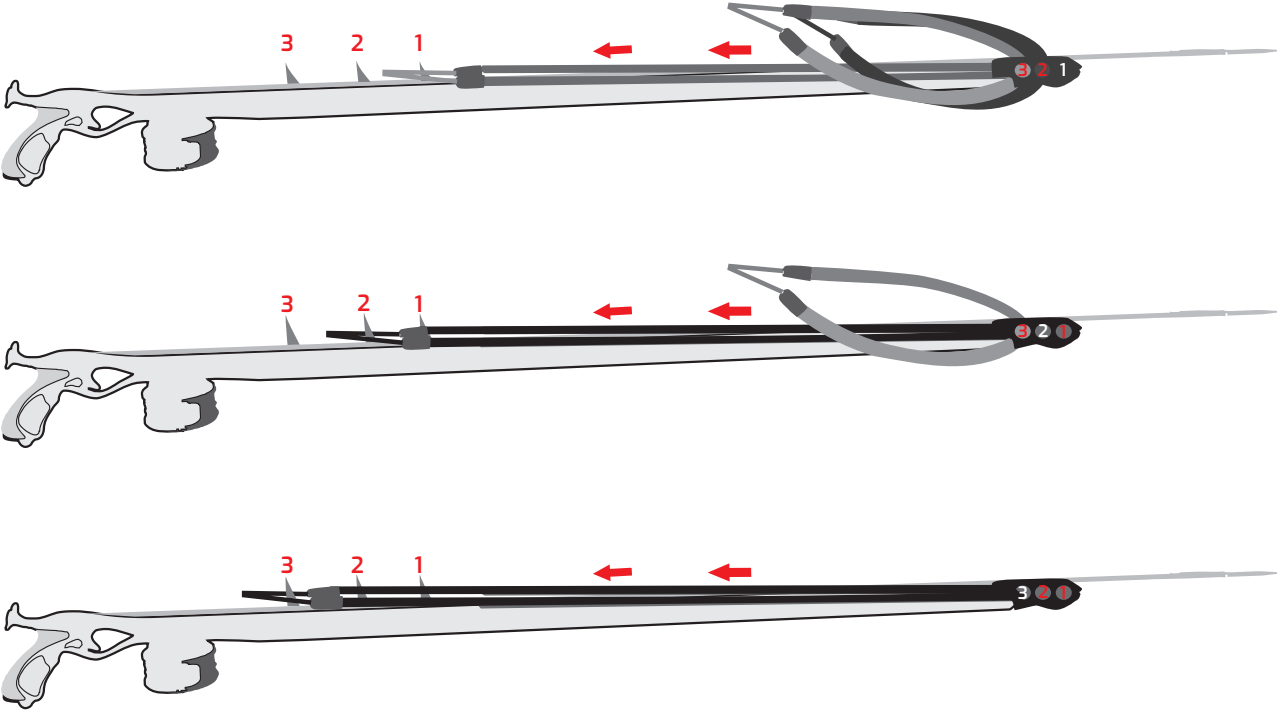

CRESSI SUB UNDERWATER SPEARGUN USE AND MAINTENANCE

GENERAL WARNINGS

⚠ WARNING: This speargun can cause permanent injury if used improperly, and should be handled accordingly.

Read all the information provided in this manual before using the speargun, and save the manual to consult it in the future.

⚠ IMPORTANT: For your own safety and the safety of those around you and to avoid damage to your speargun or property, never loader and shoot out of the water. Never fire from the air into the water. Never keep the speargun loaded, on land or in a boat. Only use it in water for underwater fishing. Make sure there are no people or objects in the projection field of the shaft.

⚠ WARNING: Never totally rely on your mechanical safety as it can fail or unintentionally be disengaged. Your mechanical safety is not a substitute for safe gun handling practices.

- The speargun was designed exclusively for use underwater, and is to be used only in the water, and exclusively for underwater spearfishing or for underwater target shooting competitions;
- To protect your safety and that of others, and to avoid damaging the weapon, be very careful to follow the instructions provided in this manual;
- To protect yourself and others and avoid damaging the weapon, never load or discharge an underwater weapon out of the water;
- Never keep the speargun loaded on land or on the boat. Use it only in the water for underwater spearfishing, or for underwater target shooting;
- Never load the speargun near swimmers or crowded areas, beaches, or reefs;
- Always load the underwater speargun with the safety engaged;
- Protective gloves and chest pads are recommended for loading Cressi sub underwater spearguns;

- To protect yourself and others, never remove or tamper with the safety on the underwater speargun;
- Once armed, hold the speargun firmly by the grip, and never by the barrel, or worse, the spear tip;
- Never put your finger on the trigger until you intend to fire;
- Never fire an underwater speargun out of the water, and never fire into the water from the air;
- All shots must be made by divers fully immersed in the water, with a sightline that allows them to operate in complete safety and to be certain that there is no one else within the active range of the weapon;
- Never fire in the direction of others or toward solid objects;
- Never point the underwater speargun at people, even with the safety engaged or with the speargun unloaded.
- Always direct the harpoon tip away from people;
- Once you're done spearfishing, it is crucial that you discharge the weapon in the water;
- It's always important to alert others to your presence in the water using marker buoys internationally and locally recognized;
- The spearguns must never be transported loaded, and during transport the weapon must be stored in a sturdy puncture-proof bag, and it must NOT be armed;
- Always comply with applicable legislation, and inform yourself in advance regarding the laws in force in your country regarding the use and possession of underwater spearguns, especially by minors.

GENERAL WARNINGS FOR POWERBAND SPEARGUNS

Please check that the product is fully intact before using it.

- Before using the powerband speargun, always check that the release system and the safety operate properly, following the instructions provided in this manual (3-6);

- Check that the powerbands are correctly fastened to the end of the head and/or wishbone, are in good condition, and show no signs of deterioration. Otherwise, promptly replace them before using the weapon;
- Always check that the line is well fastened to the end of the speargun and to the shaft according to the instructions provided in this manual (1A-1B);
- Protective gloves and chest pads are recommended for loading powerband spearguns (7A);
- Always engage the safety (in certain models this corresponds to the "LOCK" position) before using a powerband speargun, following the instructions provided in this manual (6);
- To protect your safety and that of others, never remove or tamper with the safety on the speargun;
- We recommend that you closely follow the information provided in the figures shown in this manual regarding the steps in preparing for a dive, positioning the line on the speargun, and loading the weapon, as well as the various models of powerband spearguns in the Cressi Sub range (1A-1B-2-3-4A-4B-4C-5-6-7A-7B);
- Protect the shaft with a protective tip when the weapon is not being used;
- Rinse the gun thoroughly with fresh water after each dive;
- In order to ensure the best performance from the weapon, only use Cressi Sub components and accessories;
- Any maintenance work or repair to the gun must be carried out only by technical personnel of Cressi-sub authorized centres;
- You can find your authorized Cressi-Sub center by asking your dealer, or Cressi Sub S.p.A. itself by sending an e-mail to: info@cressi.com;
- Cressi sub assumes no responsibility for any work carried out by personnel not authorized by Cressi sub.



This manual is 100% recyclable.
Please waste properly or reuse it.

PAPER - WASTE SORTING

Check the instructions of your municipality
or the authorized facilities

PAP - Raccolta Carta

Verifica le disposizioni del tuo Comune.

Cressi Sub S.p.A.

Headquarters:

Via G. Adamoli, 501
16165 Genova, Italy

+ 39 010 830791
info@cressi.com
www.cressi.com



EN	IT	FR	ES	DE	PT	ZH
TH	JA	ID	HI	RU	AR	TR
EL	PL	HU	KO	CS	SV	RO
NL	NO	FI	DA	SL	HR	SK
BG	ET	LV	LT	UK		