

CARTESIO/NEON/GOA

QUICK GUIDE



**DOWNLOAD THE
COMPLETE CRESSI
INSTRUCTION MANUAL at:
www.cressi.com/manuals**



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **INGESTION HAZARD:** The product contains non user replaceable cell batteries.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- **BATTERY TYPE:** CR2450R.
- **NOMINAL VOLTAGE:** 3V.






WARNING

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- **BATTERY TYPE: CR2450R.**
- **NOMINAL VOLTAGE: 3V.**
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

OPERATING BUTTONS

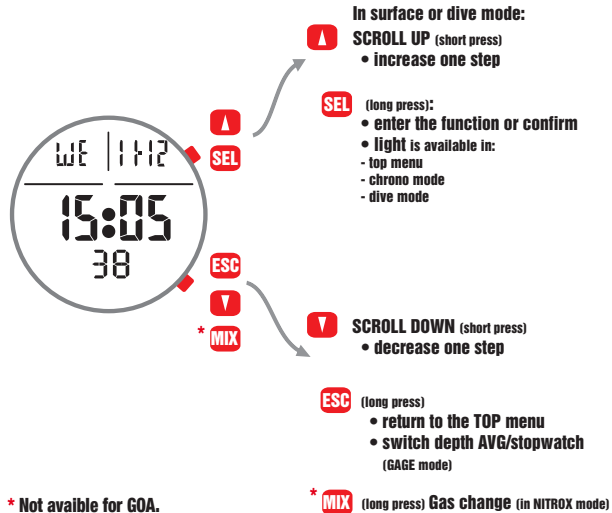

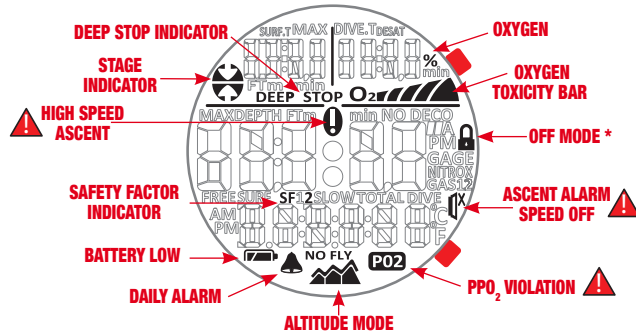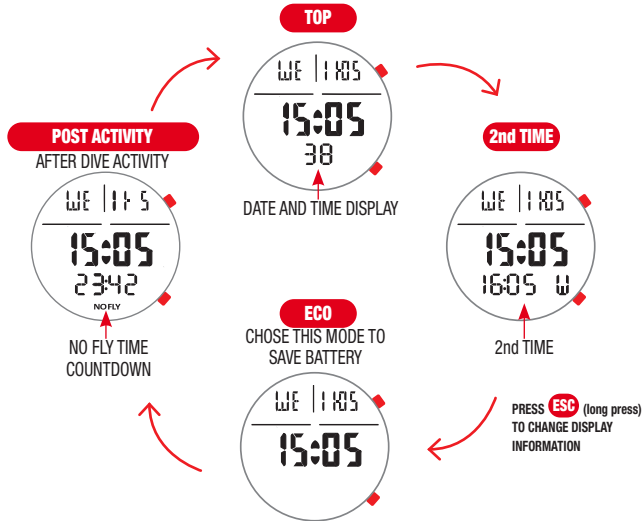

* If the computer is in OFF (lock) mode.
The underwater diving functions are disabled.

MAIN SURFACE MENU

CHRONO




↓ **SEL** ↑ **ESC**



▲ START / STOP
▼ RESET

MODE SELECT

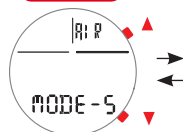

↓ **SEL** ↑ **ESC**




▲ Scroll the Mode and confirm **SEL**

In off (lock) mode, the computer doesn't monitor the body tissue. Don't dive in off (lock) mode with residual desaturation. After a dive in off (lock) mode wait at least 24hours before diving again.

LOGBOOK



↓ **SEL** ↑ **ESC**

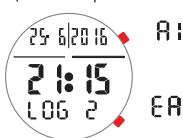


▲ see page 14

DIVE-SET




↓ **SEL** ↑ **ESC**

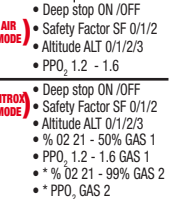


▲ Scroll the SET and confirm **SEL**
▲ Scroll +/- and confirm **SEL**
▲ **ESC** TO RETURN

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- PPO₂ 1.2 - 1.6
- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- % O₂ 21 - 50% GAS 1
- PPO₂ 1.2 - 1.6 GAS 1
- * % O₂ 21 - 99% GAS 2
- * PPO₂ GAS 2
- Surf Time Alarm **SURF-T** F1-F5 (surf time factor) /1':00"-10':00"/OFF
- Depth Alarm **DEPTH** 1 - 50 m. (3-164 FT)/OFF
- Step Depth Alarm **STEP** 2 - 25 m. (6-82 FT)/OFF
- Dive Time Alarm **DIVE-T** 0':10"-6':00"/OFF

TIME SET

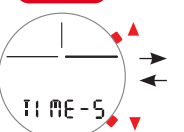

↓ **SEL** ↑ **ESC**

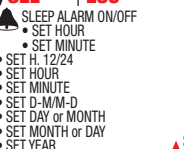

▲ SLEEP ALARM ON/OFF
• SET HOUR
• SET MINUTE
• SET H. 12/24
• SET HOUR
• SET MINUTE
• SET D-M/M-D
• SET DAY or MONTH
• SET MONTH or DAY
• SET YEAR
▲ Scroll the SET and confirm **SEL**
▲ Scroll +/- and confirm **SEL**
▲ **ESC** TO RETURN
- SET 2nd TIME ON/OFF
▲ Scroll +/- 30 Min.
▼ and confirm **SEL**

PLANNING



↓ **SEL** ↑ **ESC**




▲ SCROLL FOR INCREASE/DECREASE THE INTERVALSURF TIME AND PRESS **SEL**



▲ INCREASE DEPTH
▼ DECREASE DEPTH

SETTING & INFO SYSTEM

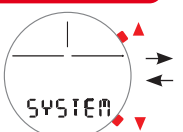

↓ **SEL** ↑ **ESC**



see page 12/13

PRE DIVE




↓ **SEL** ↑ **ESC**




see page 15

* Not available for GOA.

SYSTEM MENU

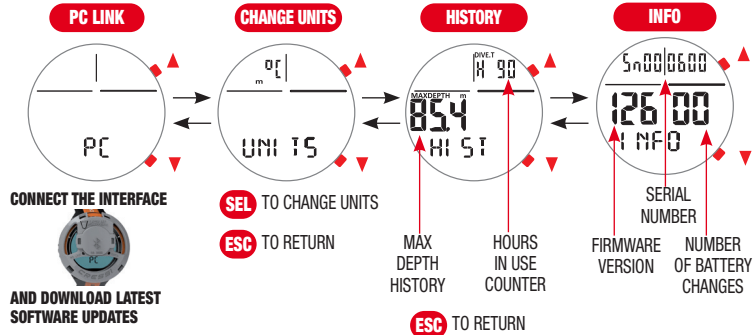

BLUETOOTH Cressi App
AppStore (iOS)
Playstore/App Gallery (Android)

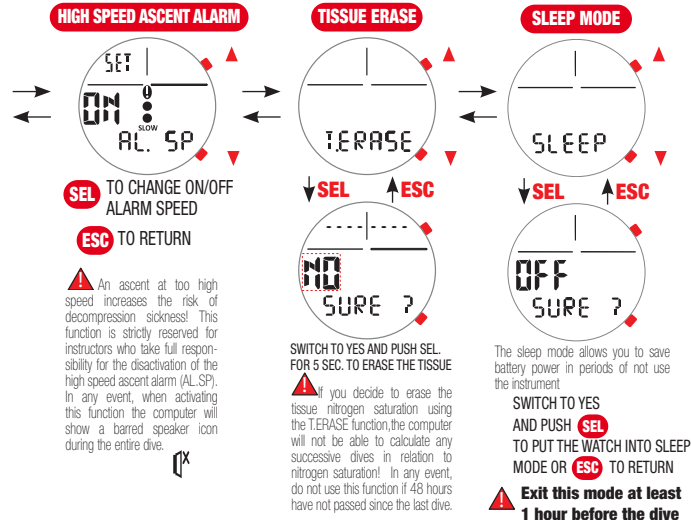

! An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP). In any event, when activating this function the computer will show a barred speaker icon during the entire dive.

SWITCH TO YES AND PUSH **SEL** FOR 5 SEC. TO ERASE THE TISSUE

! If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

The sleep mode allows you to save battery power in periods of not use the instrument


SWITCH TO YES AND PUSH **SEL** TO PUT THE WATCH INTO SLEEP MODE OR **ESC** TO RETURN

! Exit this mode at least 1 hour before the dive


LOGBOOK MENU

AIR (AIR MODE)

SAFETY FACTOR (Page 1)
DIVE TIME

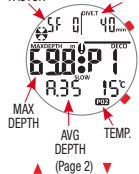


PPO₂ MODE


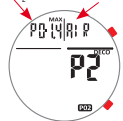


EAN (NITROX MODE)

SAFETY FACTOR (Page 1)
DIVE TIME

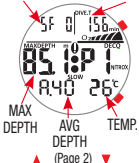


PPO₂ 02% GAS 1

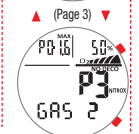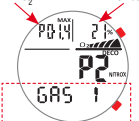

FREE (APNEA MODE)

SAFETY FACTOR (Page 1)
DIVE TIME

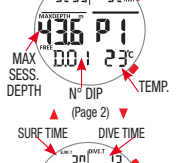


PPO₂ 02% GAS 1



GAGE (GAGE MODE)

SAFETY FACTOR (Page 1)
DIVE TIME

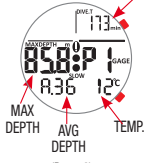


PPO₂ 02% GAS 1




PRE DIVE MENU


AIR

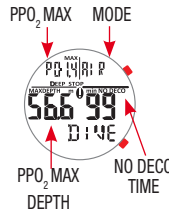



NITROX

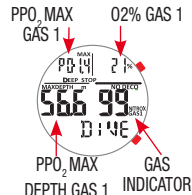

FREE

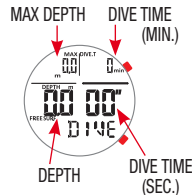


GAGE

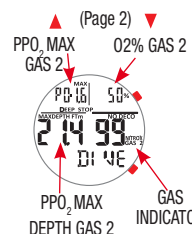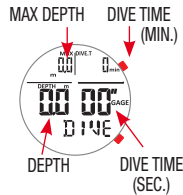


Gas 1-2 Not available for GOA.

DIVE MENU


AIR

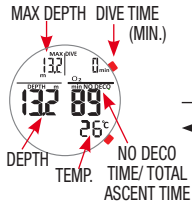


(Page 2)

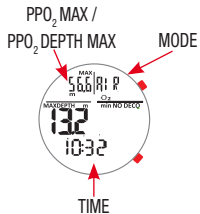


NITROX

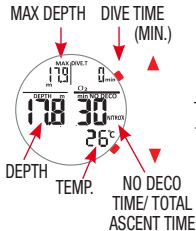


(Page 2)

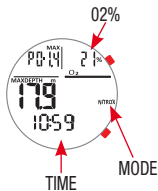

* NITROX GAS SWITCH

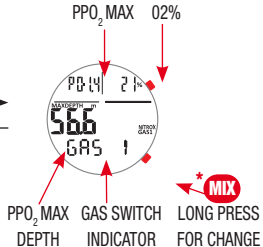


(Page 2)

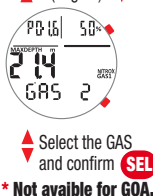


Select the GAS and confirm **SEL**

* Not available for GOA.


FREE

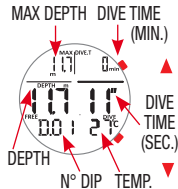


(Page 2)

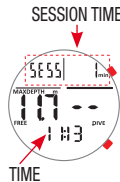


GAGE

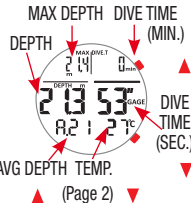

(Page 2)




LONG PRESS FOR SWITCH DEPTH/AVG STOPWATCH




POST DIVE

AIR

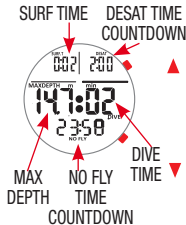


NITROX

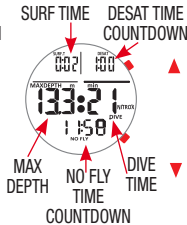

SURFACE

FREE

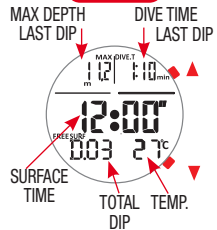

▲ (Page 2) ▼

ESC TO END THE SESSION
(SURFACE)



▲ Scroll YES / NO
and confirm **SEL**

BATTERY



LOW BATTERY
(YOU SHOULD CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE
BATTERY
(DIVE FUNCTION IS DISABLED)



This manual is 100% recyclable.
Please waste properly or keep it for
future reference.



PAPER - WASTE SORTING

Check the instructions of your
municipality or the authorized facilities

Manuale - PAP - Raccolta Carta
Verifica le disposizioni del tuo Comune.



FR

ARTICLES
DE SPORT



ASSOCIATION

OU



MAGASIN

OU



DÉCHÈTERIE



FR



QUALITY PRODUCTS
SINCE 1946

Cressi Italy Headquarters

Cressi Sub S.P.A.
Via G. Adamoli, 501
16165 Genova - Italy
Tel. +39 010 830 791
info@cressi.com



REV. 02_2024_P.P.1975