

LEONARDO 2.0

QUICK GUIDE



**DOWNLOAD THE
COMPLETE CRESSI
INSTRUCTION MANUAL at:**
www.cressi.com/manuals



WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **INGESTION HAZARD:** The product contains non user replaceable cell batteries.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- **BATTERY TYPE:** CR2430.
- **NOMINAL VOLTAGE:** 3V.



WARNING

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- **BATTERY TYPE: CR2430.**
- **NOMINAL VOLTAGE: 3V.**
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

OPERATING BUTTONS

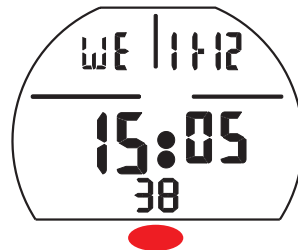

-  Short \ **NEXT (ONE STEP)**
-  Long (1 Sec.) \ **ENTER \ ESC**
-  Long (3 Sec.) \ **RETURN**

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

SWITCH ON

PUSH  TO SWITCH ON THE COMPUTER

PRE DIVE





* In case of desat time, in mode AIR, GAGE the computer will alternate the pre dive screen to that of desat screen.
In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS.

PRE DIVE (DESAT)*



THE SCREEN SCROLL AUTOMATICALLY EVERY TWO SECONDS

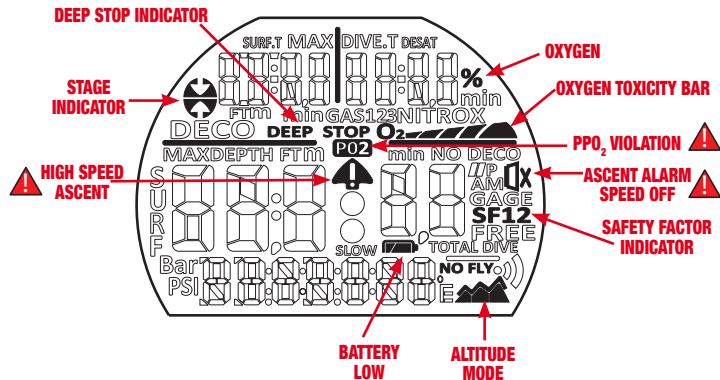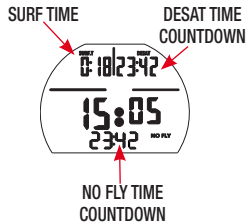


MAIN SURFACE MENU

PRE DIVE




TIME



ENTER

RETURN

MODE SET



ENTER

RETURN


AIR (AIR MODE)

EAN (NITROX MODE)

GAGE (GAUGE MODE)

Scroll the Mode and confirm

LOGBOOK




ENTER



RETURN



DIVE-SET



ENTER


AIR (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- PPO₂ 1.2 - 1.6

EAN (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth OFF 50-10 m. (164-30 FT)
- % O₂ 21 - 50% GAS 1
- PPO₂ 1.2 - 1.6 GAS 1
- * % O₂ 21 - 99% GAS 2
- * PPO₂ GAS 2

TIME SET



ENTER



SLEEP ALARM ON/OFF

- SET HOUR
- SET MINUTE
- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

Scroll the Mode

and confirm

Scroll +/-


and confirm

RETURN

ENTER

ENTER

PLANNING



ENTER

SURF INTERVAL TIME



SCROLL FOR INCREASE THE INTERVAL SURF TIME

AND ENTER



SCROLL FOR INCREASE THE DEPTH


RETURN

Not available in GAGE MODE

MAIN SURFACE MENU

PC LINK

SETTING & INFO SYSTEM



CONNECT THE INTERFACE

• BLUETOOTH Cressi App
AppStore (iOS)


PlayStore /App Gallery (ANDROID)



SYSTEM MENU

CHANGE UNITS

HISTORY




ENTER
SCROLL TO
CHANGE UNITS

MAX DEPTH HISTORY
HOURS IN USE COUNTER

INFO

HIGH SPEED ASCENT ALARM

TISSUE ERASE



FIRMWARE VERSION
SERIAL NUMBER
NUMBER OF BATTERY CHANGES




ENTER
SCROLL TO CHANGE
ON/OFF
ALARM SPEED
RETURN



An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



ENTER **RETURN**




SCROLL TO CHANGE NO / YES, AND PUSH FOR 5 SEC. TO ERASE THE TISSUE




If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

LOGBOOK MENU


AIR (AIR MODE)

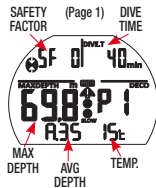


PP0₂ (Page 2) MODE

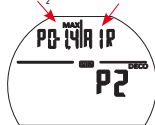


EAN (NITROX MODE)

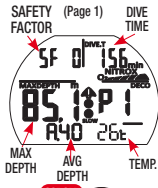

PP0₂ (Page 2) O2%

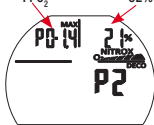

GAGE (GAGE MODE)

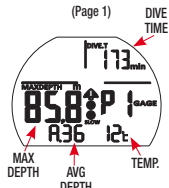

(Page 2)




PRE DIVE MENU


AIR



NITROX

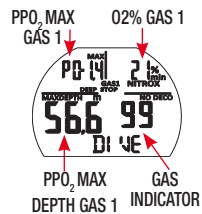


GAGE

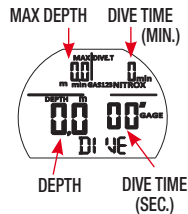


DIVE MENU


AIR

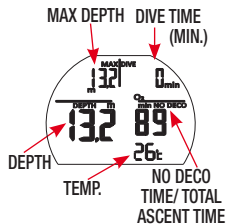


SCROLL (Page 2)

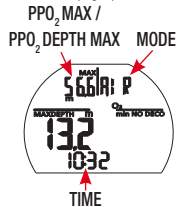


NITROX

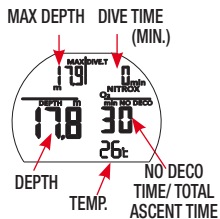


SCROLL (Page 2)

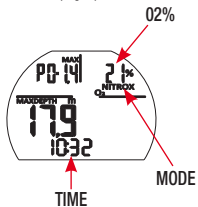

GAGE

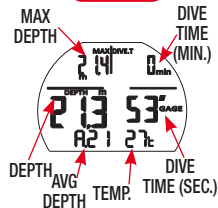


SCROLL

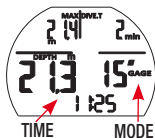


POST DIVE

AIR

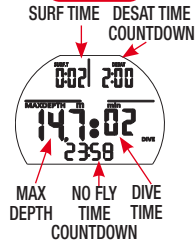

NITROX

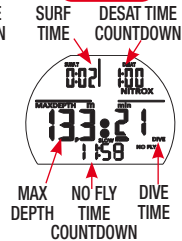

SWITCH OFF
AUTOMATICALLY IN 10 MIN.

BATTERY



LOW BATTERY
(YOU SHOULD
CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE
BATTERY
(DIVE FUNCTION IS DISABLED)



**The battery capacity guarantees operation that goes far beyond the guarantee time.
If the watch is opened before 2 years from the date of purchase, the warranty is void.**



This manual is 100% recyclable.
Please waste properly or keep it for
future reference.



PAPER - WASTE SORTING

Check the instructions of your
municipality or the authorized facilities

Manuale - PAP - Raccolta Carta
Verifica le disposizioni del tuo Comune.



FR

ARTICLES
DE SPORT



ASSOCIATION

OU



MAGASIN

OU



DÉCHÈTERIE



FR



QUALITY PRODUCTS
SINCE 1946

Cressi Italy Headquarters

Cressi Sub S.P.A.
Via G. Adamoli, 501
16165 Genova - Italy
Tel. +39 010 830 791
info@cressi.com



REV. 03_2024_P.P.1975