

CRESSI

SINCE 1946



LEONARDO QUICK GUIDE



DOWNLOAD THE COMPLETE
CRESSI INSTRUCTION MANUAL
at: www.cressi.com/manuals

LONG LIFE



BATTERY

HIGH CONTRAST



DISPLAY

HIGH POWER



BACKLIGHT

EASY ACCESS



MENU

MULTI MODE


AIR

EAN

GAGE

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

OPERATING BUTTONS

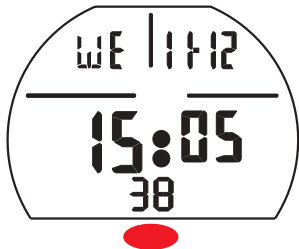

Short

\ **NEXT (ONE STEP)**



Long (1 Sec.) \ **ENTER \ ESC**



Long (3 Sec.) \ **RETURN**

SWITCH ON

PUSH  TO SWITCH ON THE COMPUTER

PRE DIVE




PRE DIVE (DESAT)*




THE SCREEN SCROLL AUTOMATICALLY
EVERY TWO SECONDS

* In case of desat time, in mode AIR, GAGE the computer will alternate the pre dive screen to that of desat screen.

In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS.

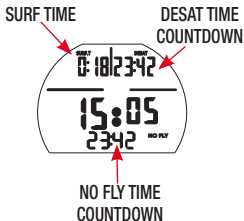

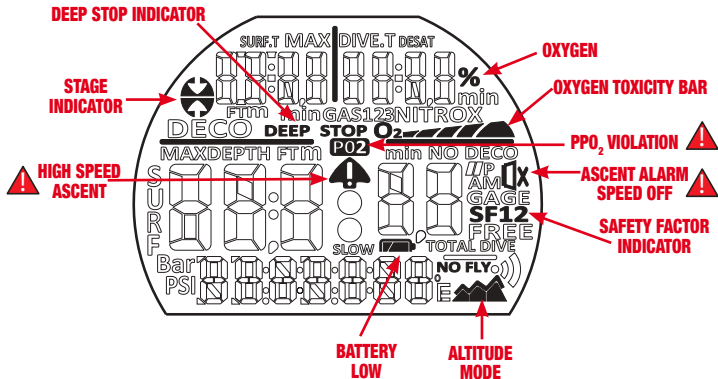


MAIN SURFACE MENU

PRE DIVE




TIME



ENTER

RETURN

MODE SET



ENTER

RETURN


AIR (AIR
MODE)

EAN (NITROX
MODE)

GAGE (GAUGE
MODE)

Scroll the Mode
and confirm

LOGBOOK




ENTER



RETURN



DIVE-SET



ENTER


AIR (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- PPO₂ 1.2 - 1.6

EAN (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth OFF 50-10 m. (164-30 FT)
- % O₂ 21 - 50% GAS 1
- PPO₂ 1.2 - 1.6 GAS 1
- * % O₂ 21 - 99% GAS 2
- * PPO₂ GAS 2

TIME SET



ENTER



SLEEP ALARM ON/OFF

- SET HOUR
- SET MINUTE
- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

Scroll the Mode

and confirm

ENTER


Scroll +/-

and confirm

ENTER

RETURN

PLANNING



ENTER

SURF
INTERVAL
TIME

SET | SURF

00:00

PLAN

SCROLL FOR INCREASE THE INTERVAL
SURF TIME

AND ENTER

P02

MAX

21%

% O₂

DEEP STOP

MONDEPTH IN min NO DECO

DEPTH

90

99

PLAN

NO
DECO
TIME

SCROLL FOR INCREASE THE DEPTH


RETURN

Not available in GAGE MODE

MAIN SURFACE MENU

PC LINK

SETTING & INFO SYSTEM



ENTER



CONNECT THE INTERFACE

- BLUETOOTH Cressi App


AppStore (iOS)

PlayStore /App Gallery (ANDROID)

SYSTEM MENU

CHANGE UNITS

HISTORY




ENTER

SCROLL TO
CHANGE UNITS


MAX
DEPTH
HISTORY

HOURS
IN USE
COUNTER

INFO

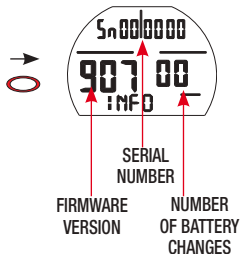

HIGH SPEED ASCENT ALARM

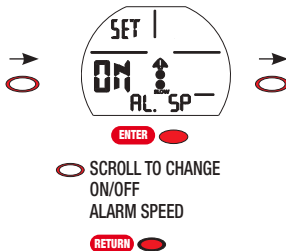


An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



TISSUE ERASE

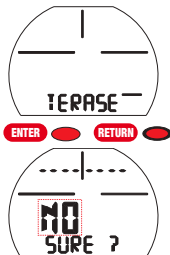


SCROLL TO CHANGE NO / YES, AND PUSH FOR 5 SEC. TO ERASE THE TISSUE

If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.


LOGBOOK MENU

AIR (AIR MODE)

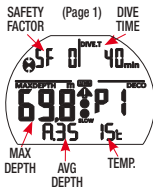


SCROLL

PP0₂ (Page 2) MODE

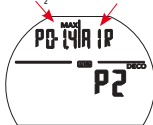


EAN (NITROX MODE)

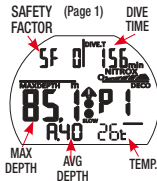


SCROLL

PP0₂ (Page 2) O2%

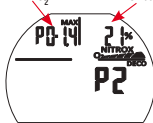

SCROLL

GAGE (GAGE MODE)

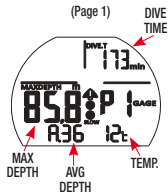

SCROLL

(Page 2)




TIME

PRE DIVE MENU


AIR



NITROX

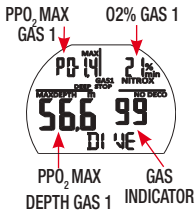


GAGE

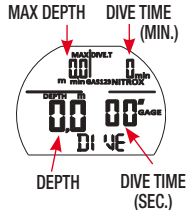

DIVE MENU


AIR

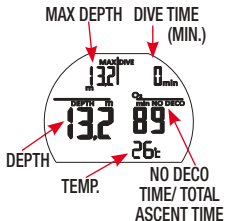


SCROLL

(Page 2)

PPO₂ MAX /
PPO₂ DEPTH MAX MODE

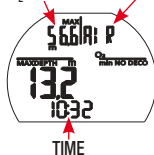


NITROX

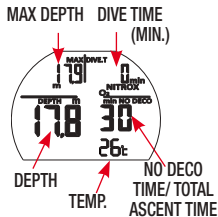


SCROLL

(Page 2)

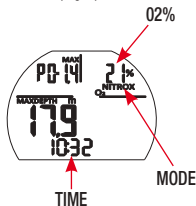


POST DIVE


GAGE

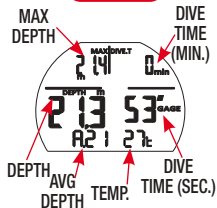


SCROLL

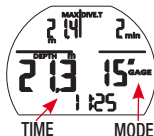

AIR

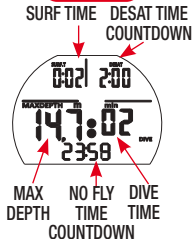

NITROX

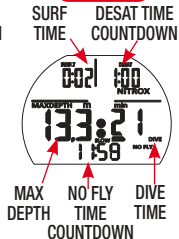

SWITCH OFF
AUTOMATICALLY IN 10 MIN.

BATTERY



LOW BATTERY
(YOU SHOULD
CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE
BATTERY
(DIVE FUNCTION IS DISABLED)



**The battery capacity guarantees operation that goes far beyond the guarantee time.
If the watch is opened before 2 years from the date of purchase, the warranty is void.**

Note: _____

CRESSI
SINCE 1946

Via G. Adamoli, 501 - 16165 GENOVA - ITALY
TEL. +39 010 830.79.1 - FAX +39 010 830.79.220
info@cressi.com - www.cressi.com

