

MICHELANGELO DONATELLO QUICK GUIDE



**DOWNLOAD THE
COMPLETE CRESSI
INSTRUCTION MANUAL at:
www.cressi.com/manuals**



WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **INGESTION HAZARD:** The product contains non user replaceable cell batteries.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- **BATTERY TYPE:** CR2430.
- **NOMINAL VOLTAGE:** 3V.



WARNING

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- **BATTERY TYPE: CR2430.**
- **NOMINAL VOLTAGE: 3V.**
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

OPERATING BUTTONS

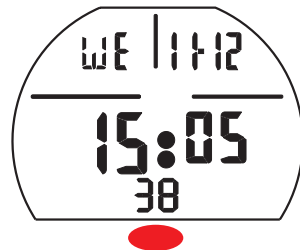

-  Short \ **NEXT (ONE STEP)**
-  Long (1 Sec.) \ **ENTER \ ESC**
-  Long (3 Sec.) \ **RETURN**

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

SWITCH ON

PUSH  TO SWITCH ON THE COMPUTER

PRE DIVE




PRE DIVE (DESAT)*



THE SCREEN SCROLL AUTOMATICALLY
EVERY TWO SECONDS

* In case of desat time, in mode AIR, FREE, GAGE the computer will alternate the pre dive screen to that of desat screen. In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS screen (DONATELLO) or GAS1/2 (MICHELANGELO).

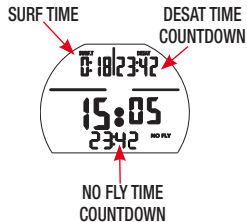

DEEP STOP INDICATOR

STAGE INDICATOR

HIGH SPEED ASCENT

OXYGEN

OXYGEN TOXICITY BAR


PP0₂ VIOLATION

ASCENT ALARM SPEED OFF

SAFETY FACTOR INDICATOR

BATTERY LOW

ALTITUDE MODE

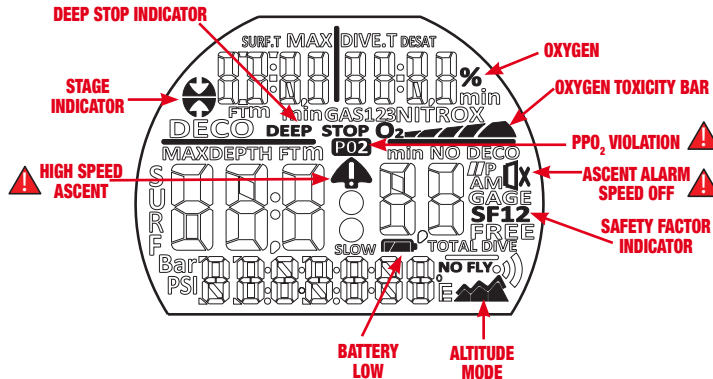


MAIN SURFACE MENU

PRE DIVE




TIME



ENTER

RETURN

MODE SET




ENTER

RETURN

AIR (AIR MODE)
EAN (NITROX MODE)
FREE (APNEA MODE)
GAGE (GAUGE MODE)

Scroll the Mode and confirm

LOGBOOK




ENTER



RETURN



DIVE-SET



ENTER

AIR (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- PPO₂ 1.2 - 1.6

EAN (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth OFF 50-10 m. (164-30 FT)
- % O₂ 21 - 50% GAS 1
- PPO₂ 1.2 - 1.6 GAS 1
- * % O₂ 21 - 99% GAS 2
- * PPO₂ GAS 2


FREE (APNEA MODE)

- Surf Time Alarm SURF-T F1-F5 (surf time factor) /1':00"-10':00"/OFF
- Depth Alarm DEPTH 1 - 50 m. (3-164 FT)/OFF
- Step Depth Alarm STEP 2 - 25 m. (6-82 FT)/OFF
- Dive Time Alarm DIVE-T 0':10"-6':00"/OFF

Scroll the Mode and confirm

RETURN

TIME SET



ENTER

SLEEP ALARM ON/OFF

- SET HOUR
- SET MINUTE
- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

Scroll the Mode and confirm

ENTER

Scroll +/- and confirm

ENTER


RETURN

- SET 2nd TIME ON/OFF

Scroll +/- 30 Min.

ENTER

PLANNING



ENTER

SURF INTERVAL TIME



Scroll for INCREASE THE INTERVAL SURF TIME AND ENTER



DEPTH

Scroll for INCREASE THE DEPTH


RETURN

Not available in GAGE MODE/FREEMODE

MAIN SURFACE MENU

PC LINK

SETTING & INFO SYSTEM



ENTER




CONNECT THE INTERFACE
AND DOWNLOAD LATEST
SOFTWARE
UPDATES



SYSTEM MENU

CHANGE UNITS

HISTORY



ENTER

SCROLL TO
CHANGE UNITS

SCROLL FOR
INCREASE THE DEPTH

RETURN


MAX
DEPTH
HISTORY

HOURS
IN USE
COUNTER

INFO

HIGH SPEED ASCENT ALARM

TISSUE ERASE



FIRMWARE
VERSION

SERIAL
NUMBER

NUMBER
OF BATTERY
CHANGES



ENTER


SCROLL TO CHANGE
ON/OFF
ALARM SPEED

RETURN



An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



ENTER RETURN





SCROLL TO CHANGE
NO / YES,
AND PUSH FOR 5 SEC.
TO ERASE THE TISSUE






If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

LOGBOOK MENU




AIR (AIR MODE)

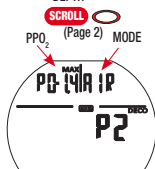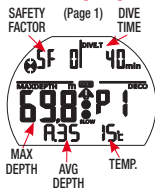



EAN (NITROX MODE)

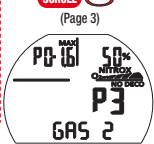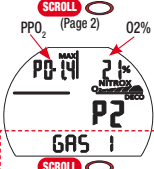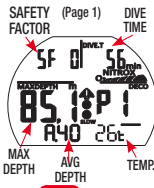

FREE (APNEA MODE)

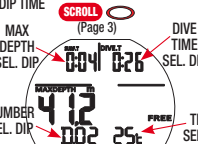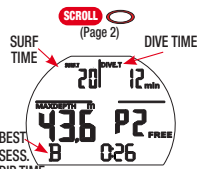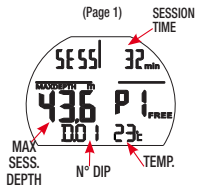


GAGE (GAGE MODE)

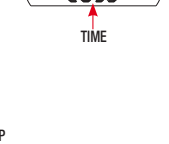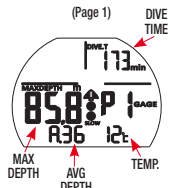


PRE DIVE MENU


AIR

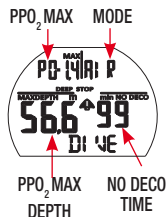


NITROX

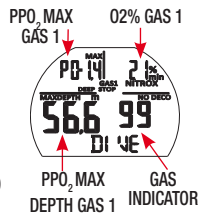


FREE

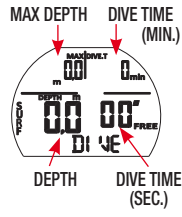

GAGE

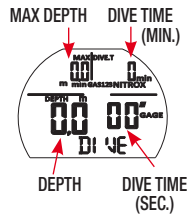


THE SCREEN SCROLL AUTOMATICALLY EVERY SECOND

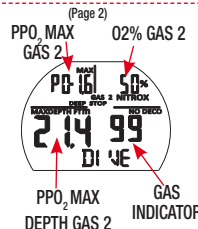


ONLY FOR MICHELANGELO

DIVE MENU


AIR

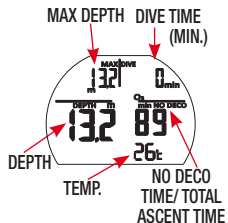


SCROLL (Page 2)

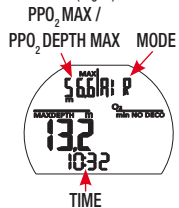


NITROX

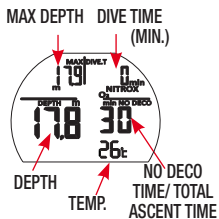


SCROLL (Page 2)

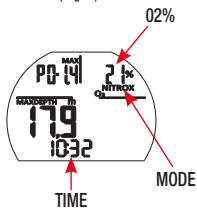

NITROX GAS SWITCH

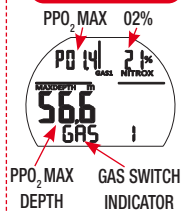


ENTER (Page 2)

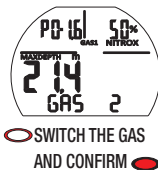


ONLY FOR MICHELANGELO


FREE

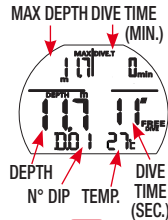


SCROLL (Page 2)

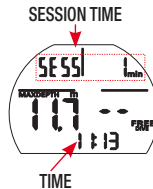

GAGE

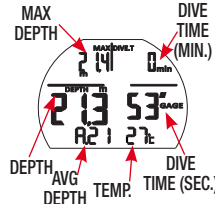


SCROLL

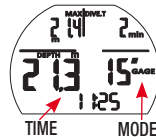


POST DIVE

AIR

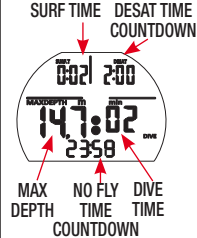


NITROX

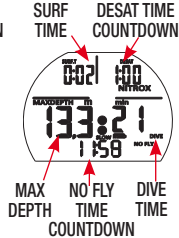

SWITCH OFF
AUTOMATICALLY IN 10 MIN.

SURFACE

FREE

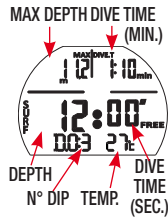

SCROLL TWO TIMES

TO END THE SESSION
(SURFACE)



SCROLL YES / NO
and confirm

BATTERY



LOW BATTERY
(YOU SHOULD CHANGE THE BATTERY
SOON)



YOU MUST CHANGE THE
BATTERY
(DIVE FUNCTION IS DISABLED)



This manual is 100% recyclable.
Please waste properly or keep it for
future reference.



PAPER - WASTE SORTING

Check the instructions of your
municipality or the authorized facilities

Manuale - PAP - Raccolta Carta
Verifica le disposizioni del tuo Comune.



FR

ARTICLES
DE SPORT



ASSOCIATION



MAGASIN



DÉCHÉTERIE



FR



QUALITY PRODUCTS
SINCE 1946

Cressi Italy Headquarters

Cressi Sub S.P.A.
Via G. Adamoli, 501
16165 Genova - Italy
Tel. +39 010 830 791
info@cressi.com



REV. 06_2024_P.P.1975