


RAFFAELLO QUICK GUIDE

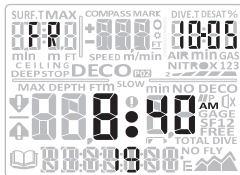

**DOWNLOAD THE
COMPLETE CRESSI
INSTRUCTION MANUAL at:**
www.cressi.com/manuals



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **INGESTION HAZARD:** The product contains non user replaceable cell batteries.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- **BATTERY TYPE:** CR2450R.
- **NOMINAL VOLTAGE:** 3V.




WARNING

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- **BATTERY TYPE: CR2450R.**
- **NOMINAL VOLTAGE: 3V.**
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

OPERATING BUTTONS

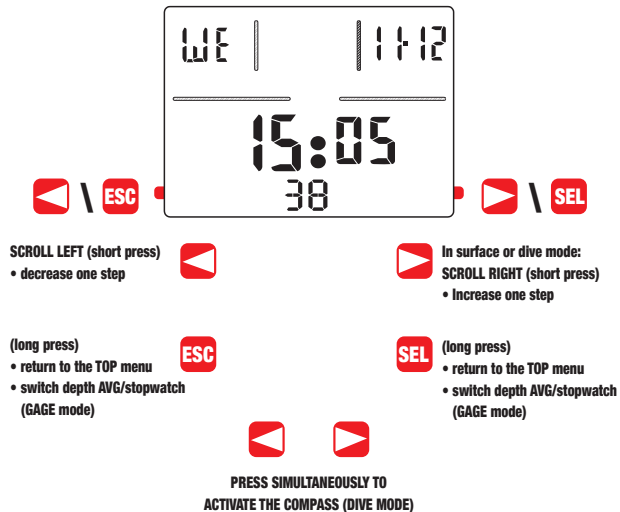

SWITCH ON

PUSH  OR  TO SWITCH ON THE COMPUTER


PRE DIVE





* In case of desat time, in mode AIR, FREE, GAGE the computer will alternate the pre dive screen to that of desat screen.

In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS screen. GAS, GAS 1/2/3 (depending on the setting).

PRE DIVE (DESAT)*




THE SCREEN SCROLL AUTOMATICALLY EVERY TWO SECONDS

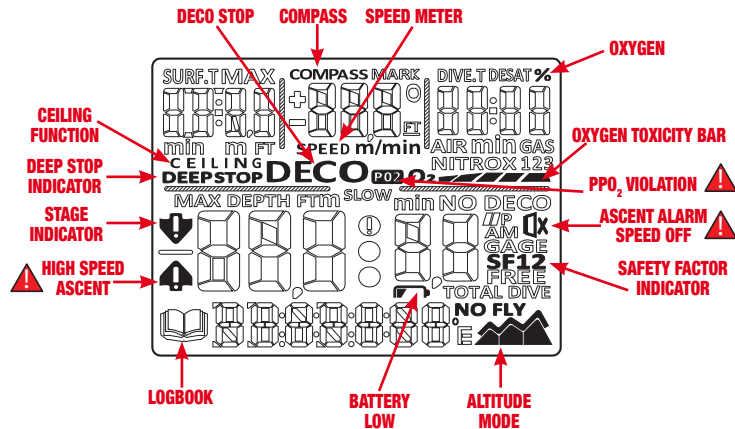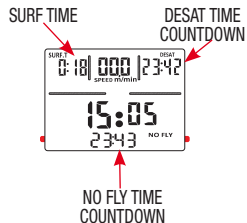


MAIN SURFACE MENU

PRE DIVE




TIME



SEL TO SWITCH ON THE BACKLIGHT

MODE SET



↑ ESC **SEL ↓**


AIR (AIR MODE)
EAN (NITROX MODE)
FREE (APNEA MODE)
GAGE (GAUGE MODE)

◀ SCROLL THE DIVE MODE **▶**


SEL TO CONFIRM

ESC TO RETURN

LOGBOOK



↑ ESC **SEL ↓**




◀ SCROLL BETWEEN THE LOGS **▶**



ESC TO RETURN

DIVE-SET



↑ ESC **SEL ↓**

AIR (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- Ceiling
- PPO₂ 1.2 - 1.6

EAN (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth Alarm OFF/50-10m (164-30FT)
- GAS1 21-50% O₂
- GAS1 PPO₂ 1.2
- GAS2 OFF/21-99%O₂
- GAS2 PPO₂ 1.2
- GAS3 OFF/21-99%O₂
- GAS3 PPO₂ 1.2

FREE (APNEA MODE)

- Surf Time Alarm SURF-T F1-F5 (surf time factor) /1':00"-10':00"/OFF
- Depth Alarm DEPTH 1 - 50 m. (3-164 FT)/OFF
- Step Depth Alarm STEP 2 - 25 m. (6-82 FT)/OFF
- Dive Time Alarm DIVE-T 0':10"-6':00"/OFF

GAGE (GAUGE MODE)


- Depth Alarm OFF/50-10m (164-30 FT)

◀ SCROLL THE SETTINGS AND THE SUBSETTINGS **▶**

SEL TO CONFIRM

ESC TO RETURN

TIME SET



↑ ESC **SEL ↓**


- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

◀ SCROLL THE SETTINGS AND THE SUBSETTINGS **▶**

SEL TO CONFIRM

ESC TO RETURN


PLANNING



↑ ESC **SEL ↓**



◀ SCROLL FOR INCREASE/DECREASE THE INTERVAL SURF TIME AND PRESS **SEL**



DEPTH NO DECO TIME

Not available in FREE MODE / GAGE MODE

MAIN SURFACE MENU

PC LINK

SETTING & INFO SYSTEM



CONNECT THE INTERFACE



AND DOWNLOAD LATEST SOFTWARE UPDATES
 BLUETOOTH Cressi App
 App Store (iOS)
 Playstore/App Gallery (Android)



SYSTEM MENU

CHANGE UNITS

HISTORY



SEL TO CHANGE (C° m / F -FT)

ESC TO RETURN

MAX DEPTH HISTORY
 HOURS IN USE COUNTER


ESC TO RETURN

INFO

HIGH SPEED ASCENT ALARM

SLEEP MODE

TISSUE ERASE



FIRMWARE VERSION
 SERIAL NUMBER
 NUMBER OF BATTERY CHANGES

SEL SCROLL TO CHANGE ON/OFF ALARM SPEED

ESC TO RETURN

Scroll TO CHANGE NO / YES, AND PUSH FOR 5 SEC. TO ERASE THE TISSUE

! An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



ESC **SEL**
NO SURE ?
 SCROLL CHANGE AND PUSH FOR 5 SEC. TO ENTER IN SLEEP MODE



ESC **SEL**
NO SURE ?
 SCROLL TO CHANGE NO / YES AND PUSH FOR 5 SEC. TO ERASE THE TISSUE

ESC TO RETURN


! If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

LOGBOOK MENU




AIR (AIR MODE)




EAN (NITROX MODE)



SCROLL THROUGH THE PAGES RELATED TO GAS 2/3 (IF INCLUDED IN THE DIVE SET)

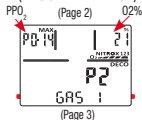

FREE (APNEA MODE)

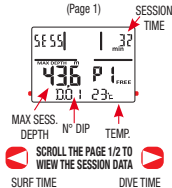


BEST SESS. DIP TIME

SEL TO ENTER IN A SINGLE DIP MENU




ESC TO RETURN TO THE SESSION DATA

GAGE (GAGE MODE)



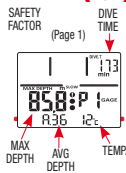


PRE DIVE MENU


AIR

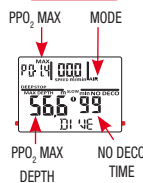


NITROX

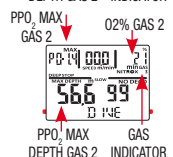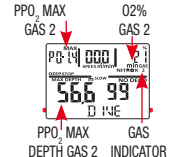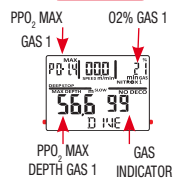

FREE

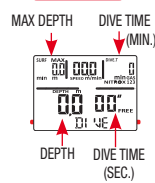

GAGE

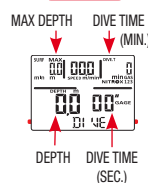

COMPASS


IN DIVE MODE OR PREDIVE MODE IS POSSIBLE TO ACTIVATE THE NAVIGATION COMPASS



PRESS SIMULTANEOUSLY TO
SWITCH FROM THE SPEED DISPLAY
TO THE COMPASS DISPLAY



PRESS SIMULTANEOUSLY TO
SWITCH FROM THE CARDINAL
POINTS TO THE COMPASS DEGREES





PRESS SIMULTANEOUSLY FOR 2 SECONDS
TO MARK NAVIGATION POINT

MARK



PRESS SIMULTANEOUSLY TO
RETURN TO DISPLAYING THE
SPEED METER

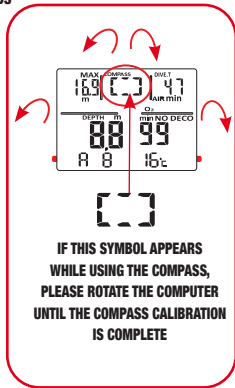

DIVE MENU - DURING THE DIVE

AIR

MAX DEPTH DIVE TIME (MIN.)



DEPTH TEMP. NO DECO
TIME/TOTAL
ASCENT TIME



PPO₂ MAX /
PPO₂ DEPTH MAX MODE



TIME

NITROX

MAX DEPTH DIVE TIME (MIN.)



DEPTH TEMP. NO DECO
TIME/TOTAL
ASCENT TIME



02%



TIME MODE

NITROX GAS SWITCH

PPO₂ MAX 02%




PPO₂ MAX GAS SWITCH
DEPTH INDICATOR

ESC TO ENTER THE GAS CHANGE MODE

SCROLL TO CHOOSE PRESET
GAS2 OR GAS3

SEL TO CONFIRM THE CHOSEN GAS



FREE

MAX DEPTH DIVE TIME (MIN.)

DEPTH N° DIP TEMP. DIVE TIME (SEC.)

PAGE SCROLL (Page 2)

SESSION TIME

TIME

GAGE

MAX DEPTH DIVE TIME (MIN.)

DEPTH AVG TEMP. DIVE TIME (SEC.)

PAGE SCROLL (Page 2)

TIME

ESC TO ENTER/ESC THE DEPTH STOPWATCH

STOPWATCH

TO START/STOP DEPTH STOPWATCH

TO RESET DEPTH STOPWATCH

POST DIVE

AIR

SURF TIME DESAT TIME COUNTDOWN

MAX DEPTH NO FLY TIME COUNTDOWN DIVE TIME

NITROX

SURF TIME DESAT TIME COUNTDOWN

MAX DEPTH NO FLY TIME COUNTDOWN DIVE TIME

THE DIVE COMPUTER SWITCH OFF
AUTOMATICALLY AFTER 10 MIN.

SURFACE

FREE

MAX DEPTH DIVE TIME (MIN.)

DEPTH N° DIP TEMP. DIVE TIME (SEC.)

TO END THE APNEA SESSION, PUSH **ESC**



SCROLL YES/NOT

AND CONFIRM **SEL**

THE APNEA SESSION END
AUTOMATICALLY AFTER 30 MIN.

BATTERY



LOW BATTERY
(YOU SHOULD CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE BATTERY
(DIVE FUNCTION IS DISABLED)



The battery capacity guarantees
operation that goes far beyond
the guarantee time.
If the watch is opened before 2
years from the date of purchase,
the warranty is void.



This manual is 100% recyclable.
Please waste properly or keep it for
future reference.



PAPER - WASTE SORTING

Check the instructions of your
municipality or the authorized facilities

Manuale - PAP - Raccolta Carta
Verifica le disposizioni del tuo Comune.



FR

ARTICLES
DE SPORT



ASSOCIATION

OU



MAGASIN

OU



DÉCHÈTERIE



FR



QUALITY PRODUCTS
SINCE 1946

Cressi Italy Headquarters

Cressi Sub S.P.A.
Via G. Adamoli, 501
16165 Genova - Italy
Tel. +39 010 830 791
info@cressi.com



REV. 02_2024_P.P.1975